


ALU-STAR

Installation in plasterboard wall/ ceiling

1

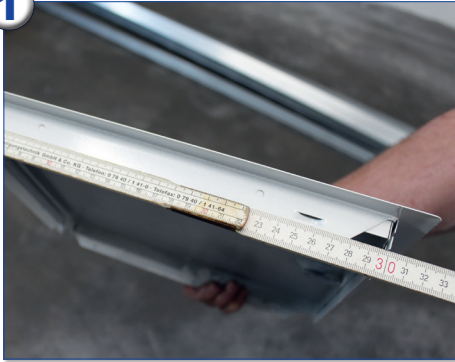


Measure out installation dimension of access panel.

2



Mount installation dimension + 6 mm cut end on the desired spot. Make sure that the angle is 90°.

3

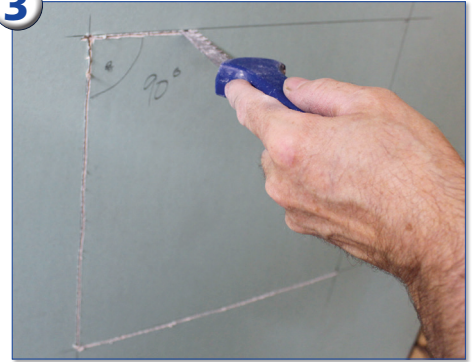

Saw out installation opening using a knife or a jigsaw. Precise working means less post-treatment afterwards.

4



Pass frame diagonally through the cut-out.

5




Adjust frame.

6



Fix frame.

7

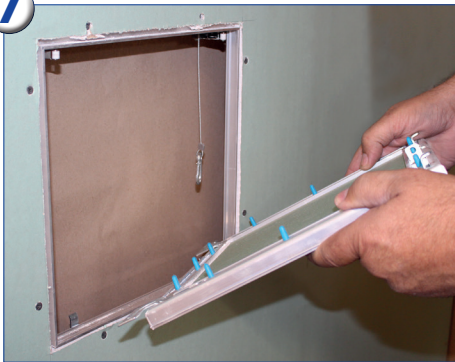


Hook in door leaf.

8



Secure door leaf with retaining cable.

9

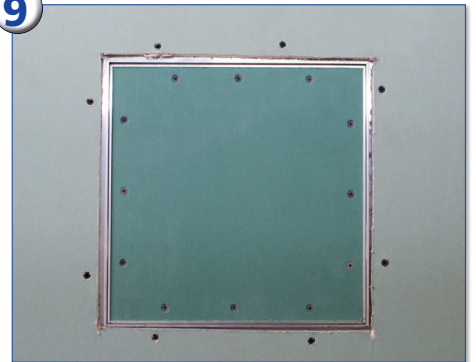

Close door leaf.
Fill wall and door leaf separately.